





# **CRASH BOBBINS 125 - 390**

**MODEL 2017+**

Installation Instructions


Kit  
contents

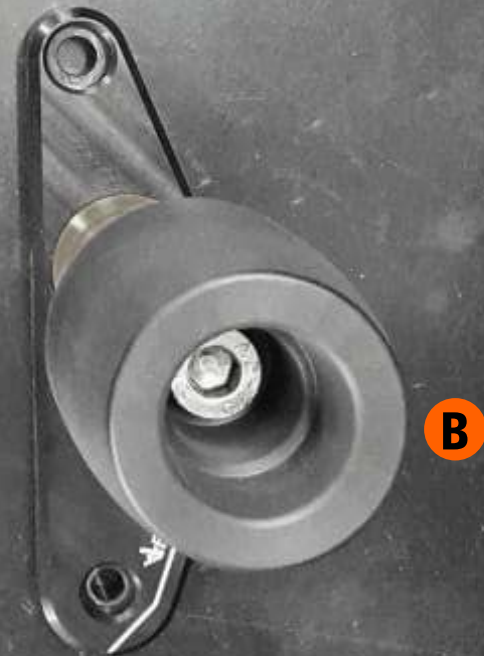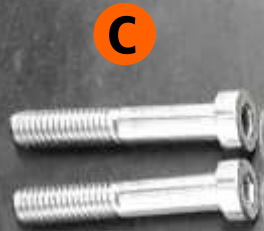

# Installation Instructions



**1. Unscrew original bolt - repeat on the other side**

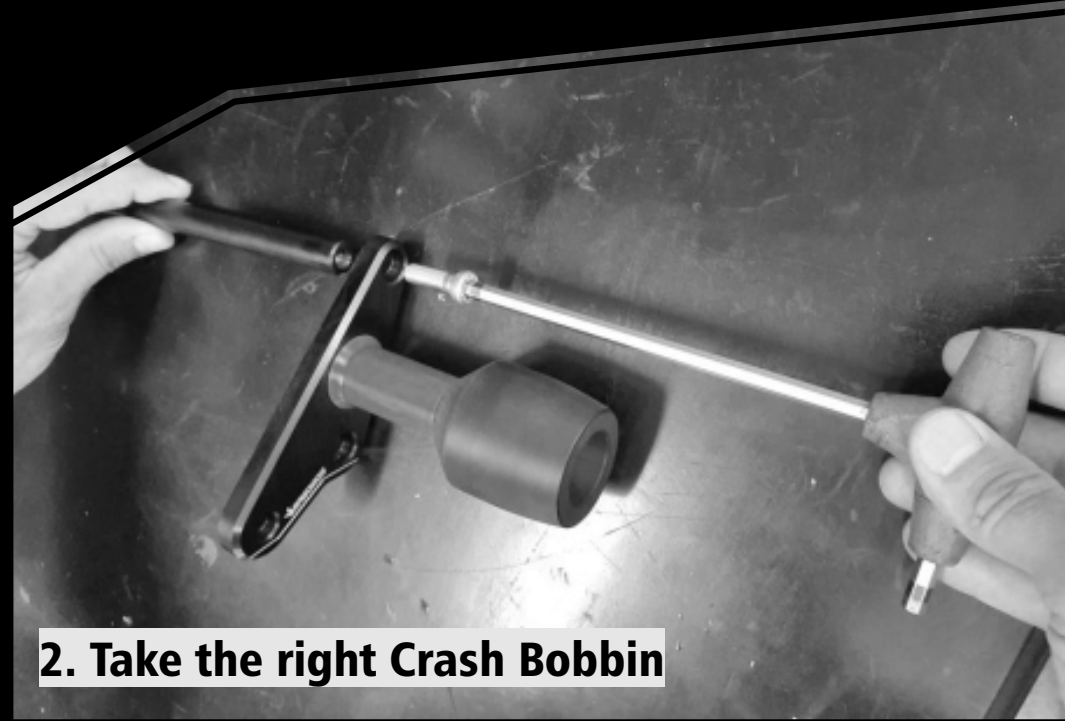

**2. Take the right Crash Bobbin**


**2.a. Attach the bolt to the bobbin and connection rod. Fully tighten to 8Nm.**



## Installation Instructions




**3. Put the part G (with bigger hole) in the place of old bolt from step 1.**

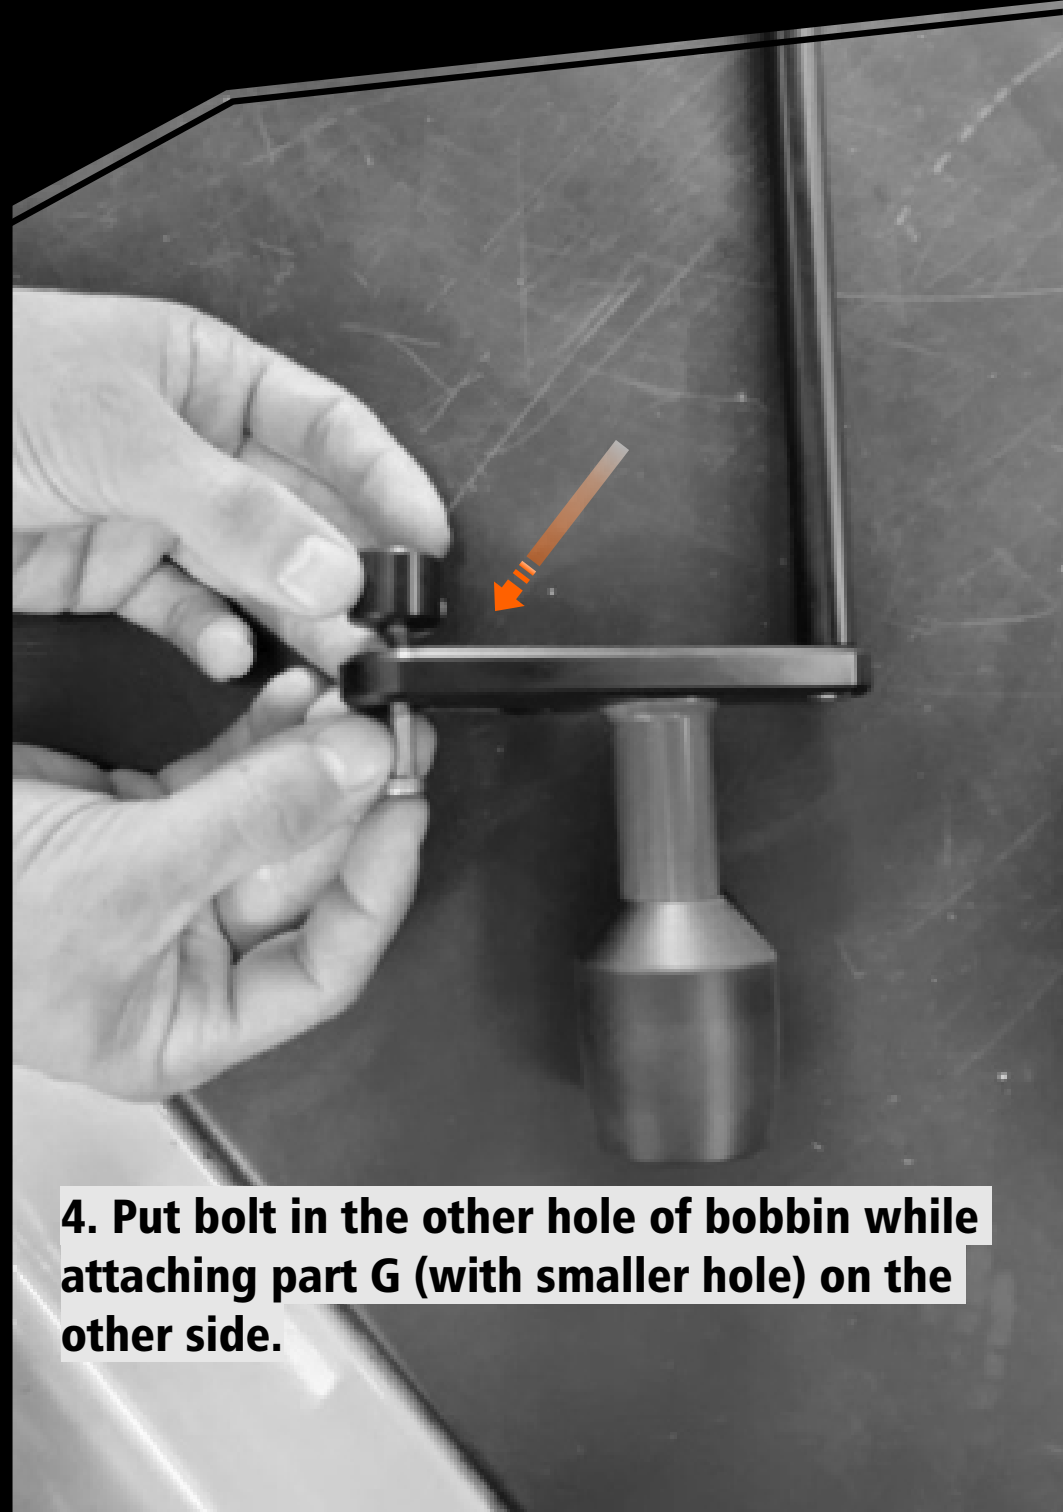

**4. Put bolt in the other hole of bobbin while attaching part G (with smaller hole) on the other side.**

# Installation Instructions

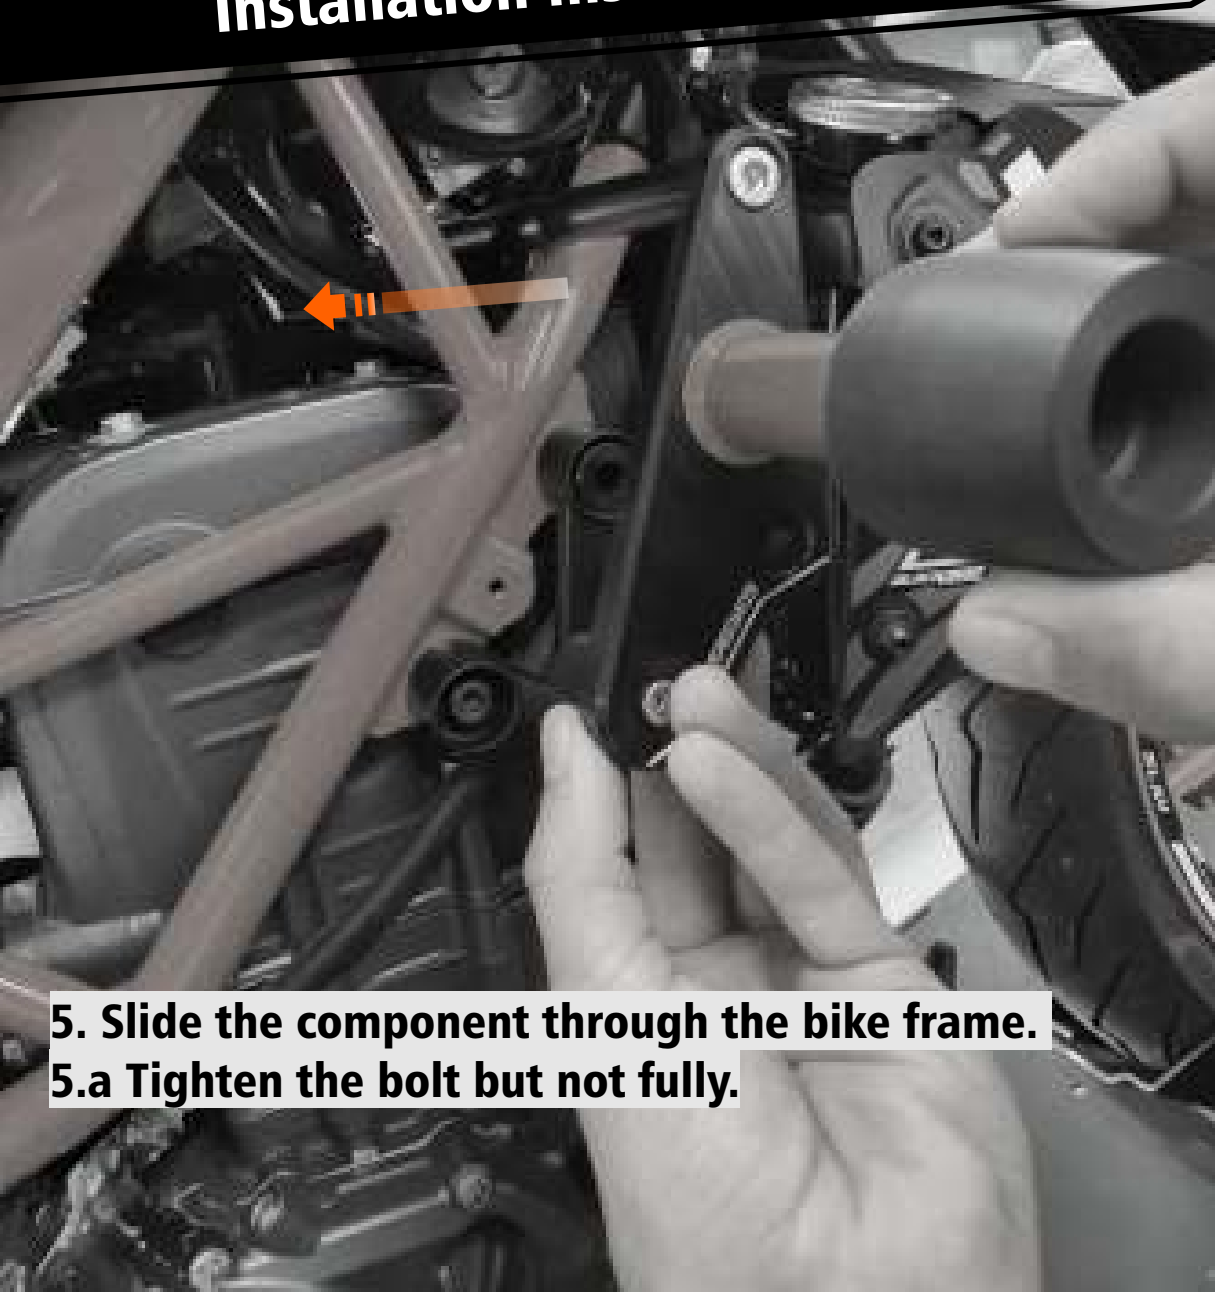

**5. Slide the component through the bike frame.**

**5.a Tighten the bolt but not fully.**



**5.b Add bolt and tighten but not fully.  
Repeat steps 2a - 5b on other side.**

## Installation Instructions




**6. Add the last bolt on other side. Fully tighten to 8Nm.**

**7. Fully tighten all bolts.**

**M6: 5Nm**

**M8: 8Nm.**

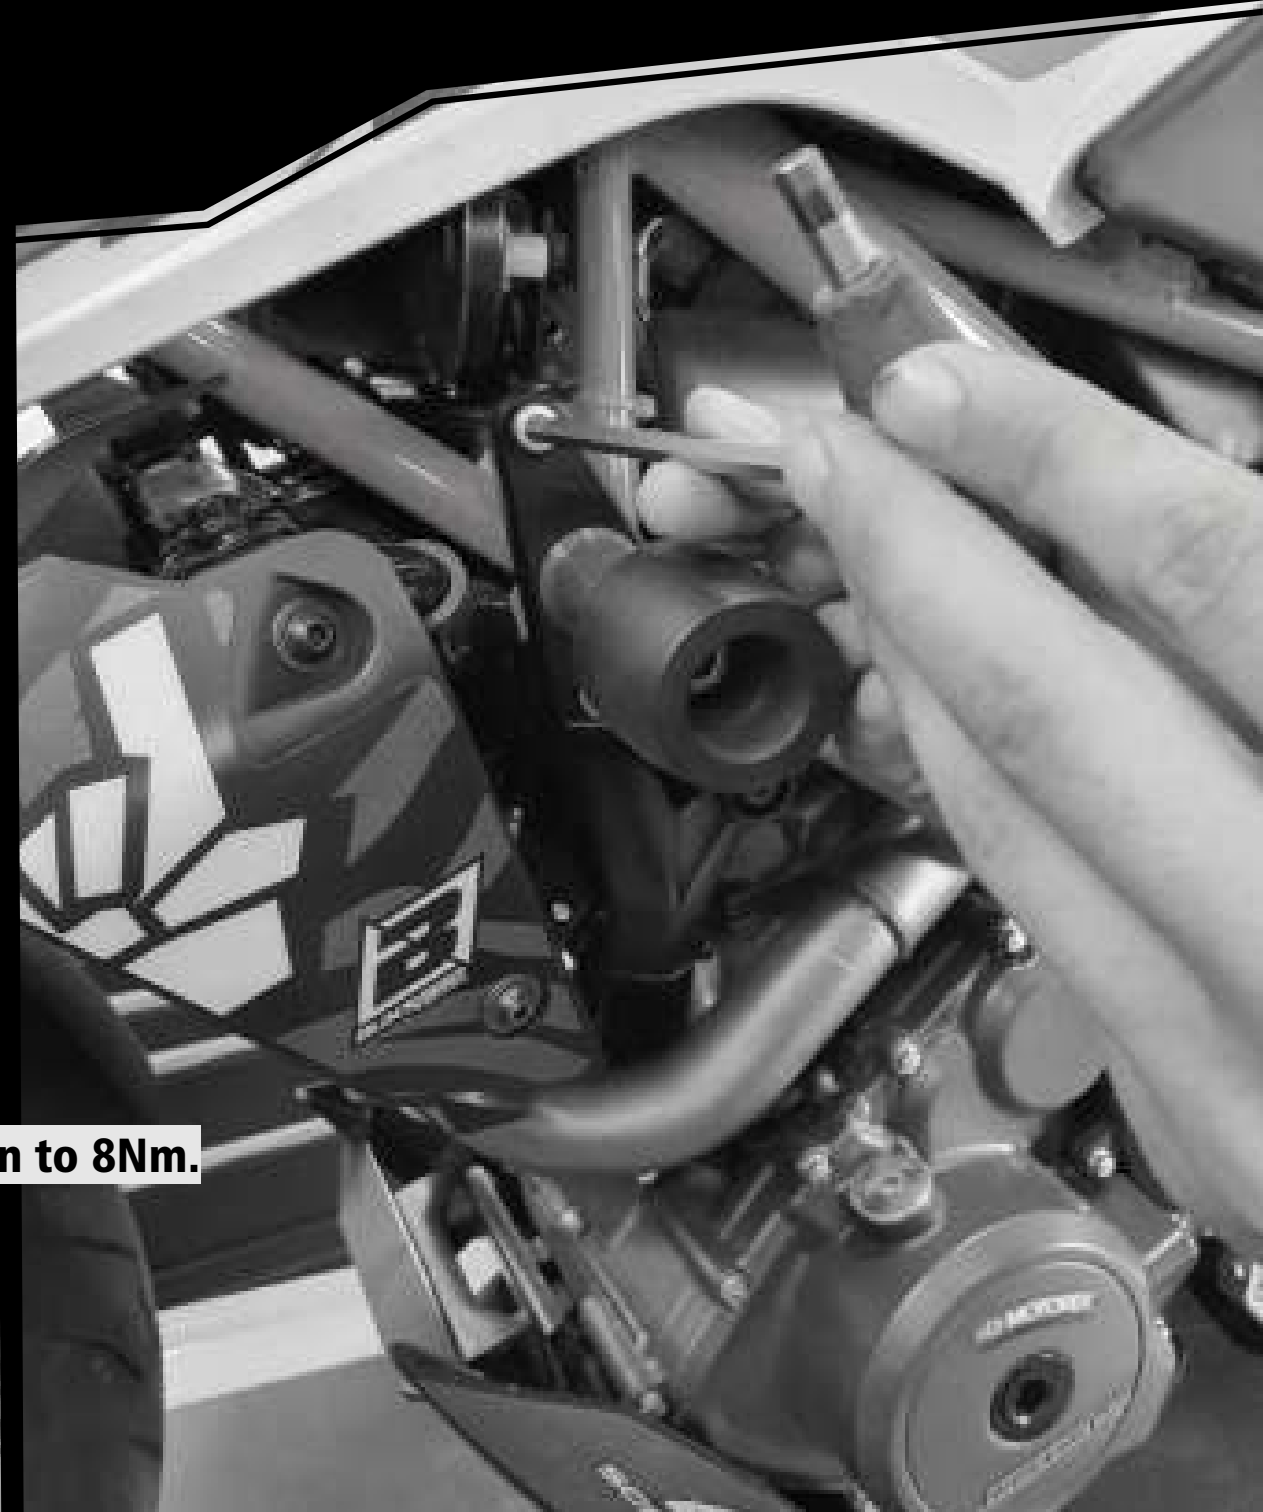





## **IMPORTANT**



After installation of your tail tidy ensure that the license plate does not contact the rear tyre when suspension is fully compressed.

It is recommended that periodic inspections are made to ensure that all bolts are tightend.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced.

The manufacturer or supplier cannot be held responsible for products that are incorrectly mounted or inappropriately used.

It is recommended to check all connections regularly for tightness of fit.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

**NOW YOU ARE READY...  
TO ROCK THE STREETS!**





[www.BAGOROSPERFORMANCE.com](http://www.BAGOROSPERFORMANCE.com)