




KTM 690 DUKE / 690 SMC R

**SPINDLE SLIDERS
REAR**

Installation Instructions

KIT CONTENTS

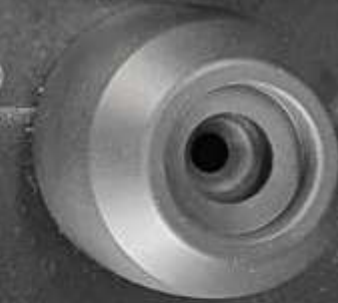

Installation Instructions 1



1. Remove the OEM bolt.



2. Put bobbin on the axle rod.




3. Place the screw.


Installation Instructions 2



1. Slide the axle rod trough.

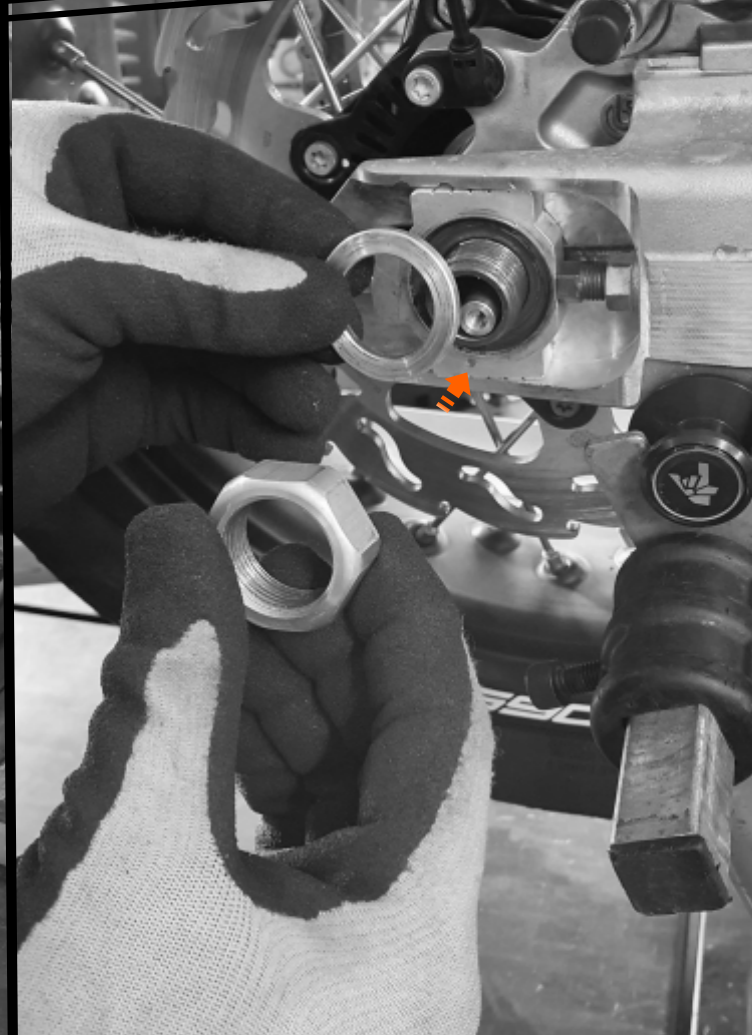

2. Place washers.

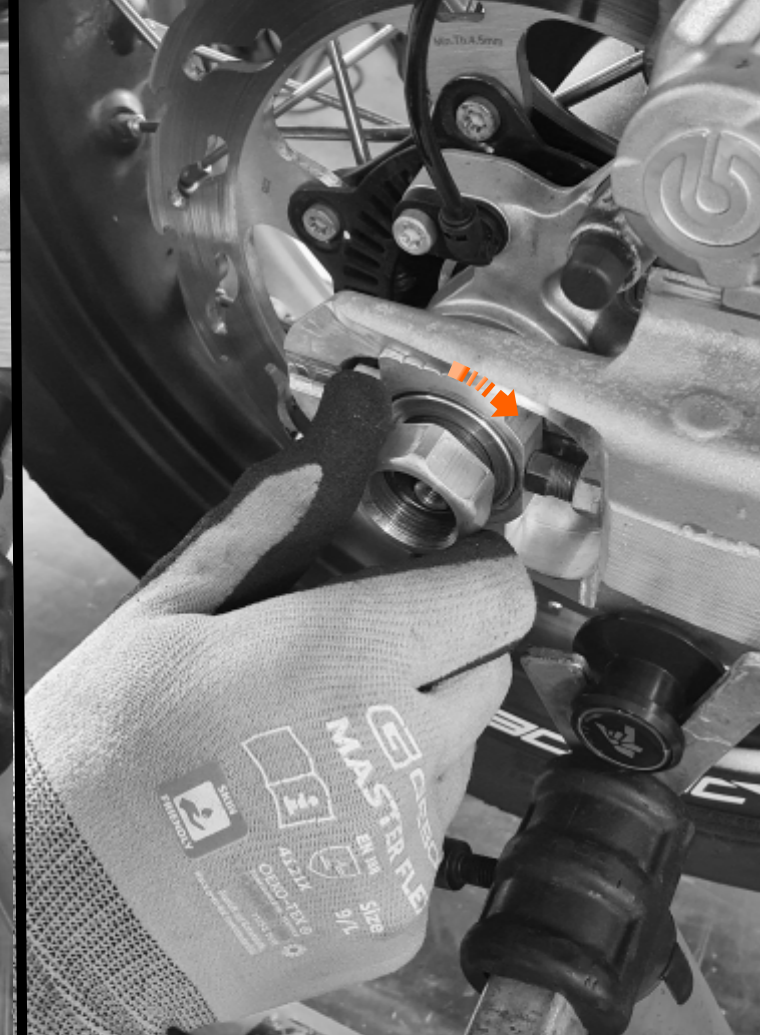

3. Tighten.

Installation Instructions **3**



1. Fully tighten to max 6Nm.



2. Place bobbin.

Installation Instructions



1. Place nut and fully tighten to max 6Nm.



2. Put stickers on both bobbins.



IMPORTANT



It is recommended that periodic inspections are made to ensure that all bolts are tightend.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced.

The manufacturer or supplier cannot be held responsible for products that are incorrectly mounted or inappropriately used.

It is recommended to check all connections regularly for tightness of fit.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

**NOW YOU ARE READY...
TO ROCK THE STREETS!**

BAGOROSPERFORMANCE.COM