



KTM 790 DUKE

MODEL 2017+

TAIL TIDY

Installation Instructions

Installation Instructions

A



B



C



D



E



F



G



H


Kit contents




Installation Instructions

✂ • Tools needed


* Tools, recommended by our mechanics; propper installation can also be carried out with different tools.

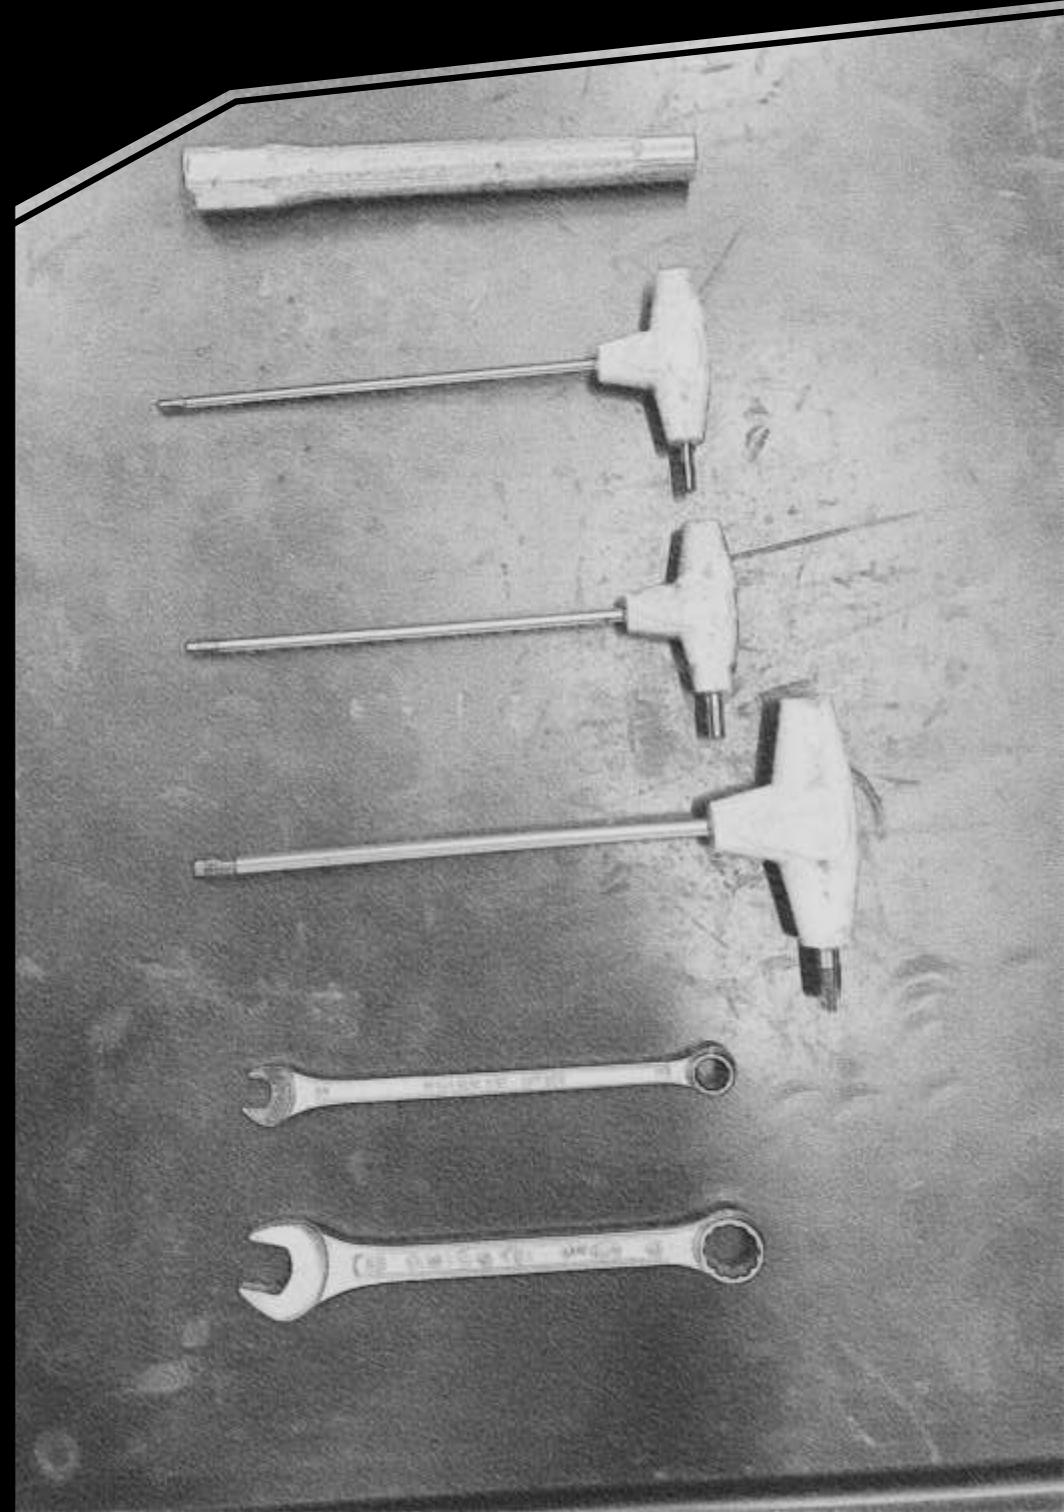

Installation Instructions 1

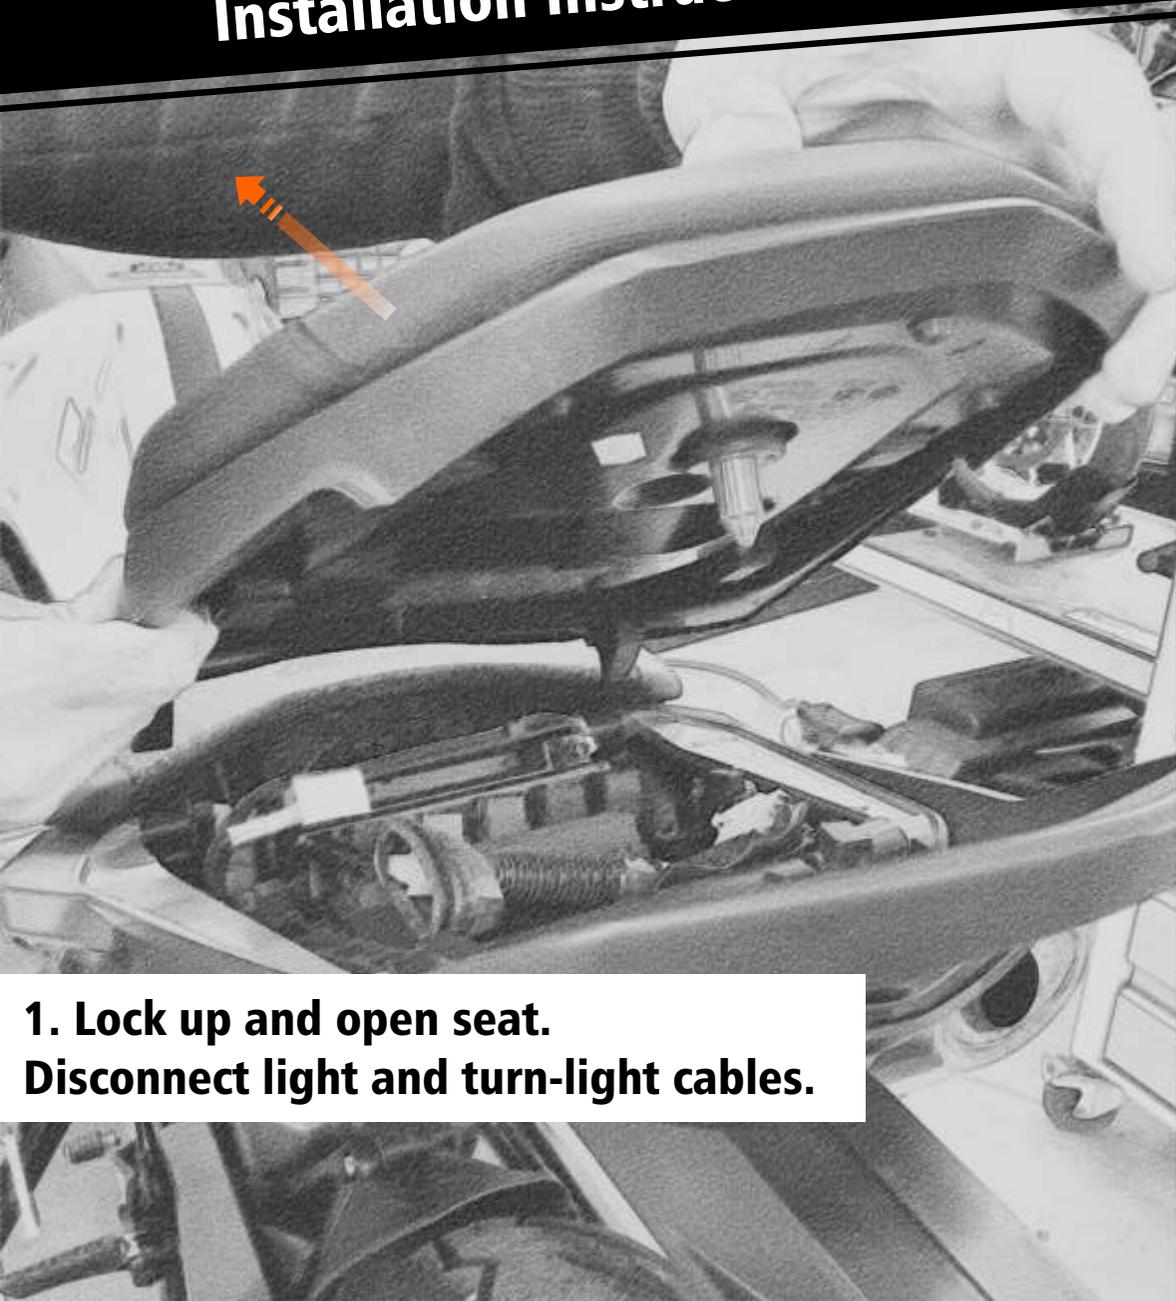

**1. Lock up and open seat.
Disconnect light and turn-light cables.**

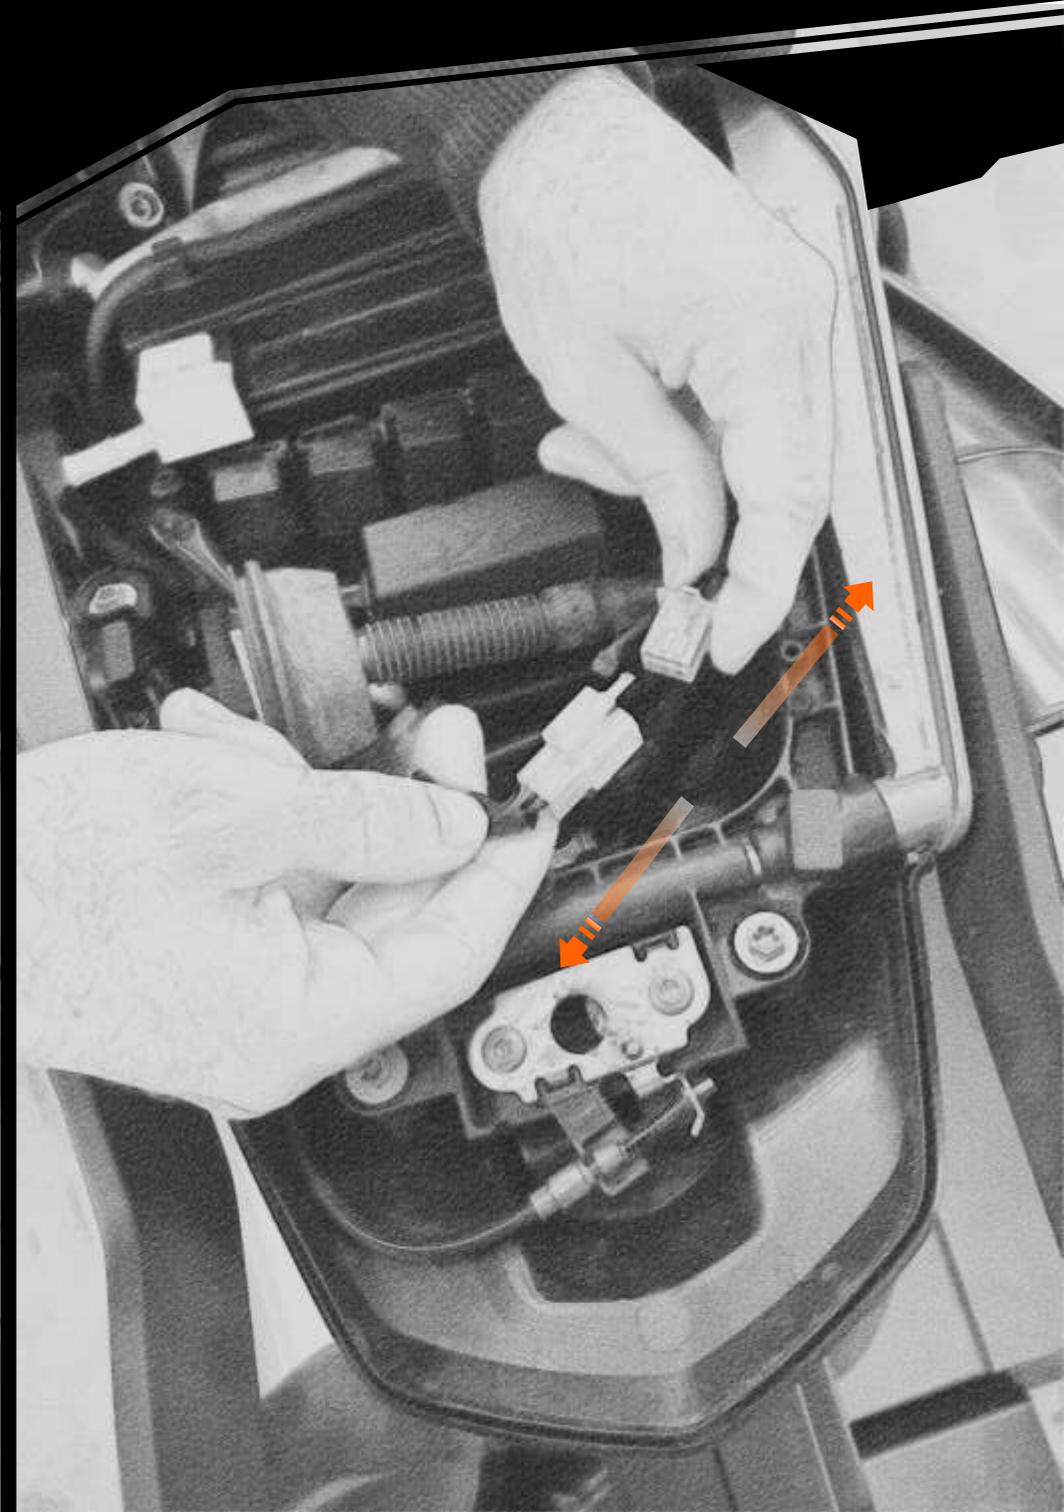


Installation Instructions 2



Unscrew 4 bolts which hold the stock Tail Tidy. Remove old Tail Tidy.


Installation Instructions **3**

1. Remove the reflector and save for later.

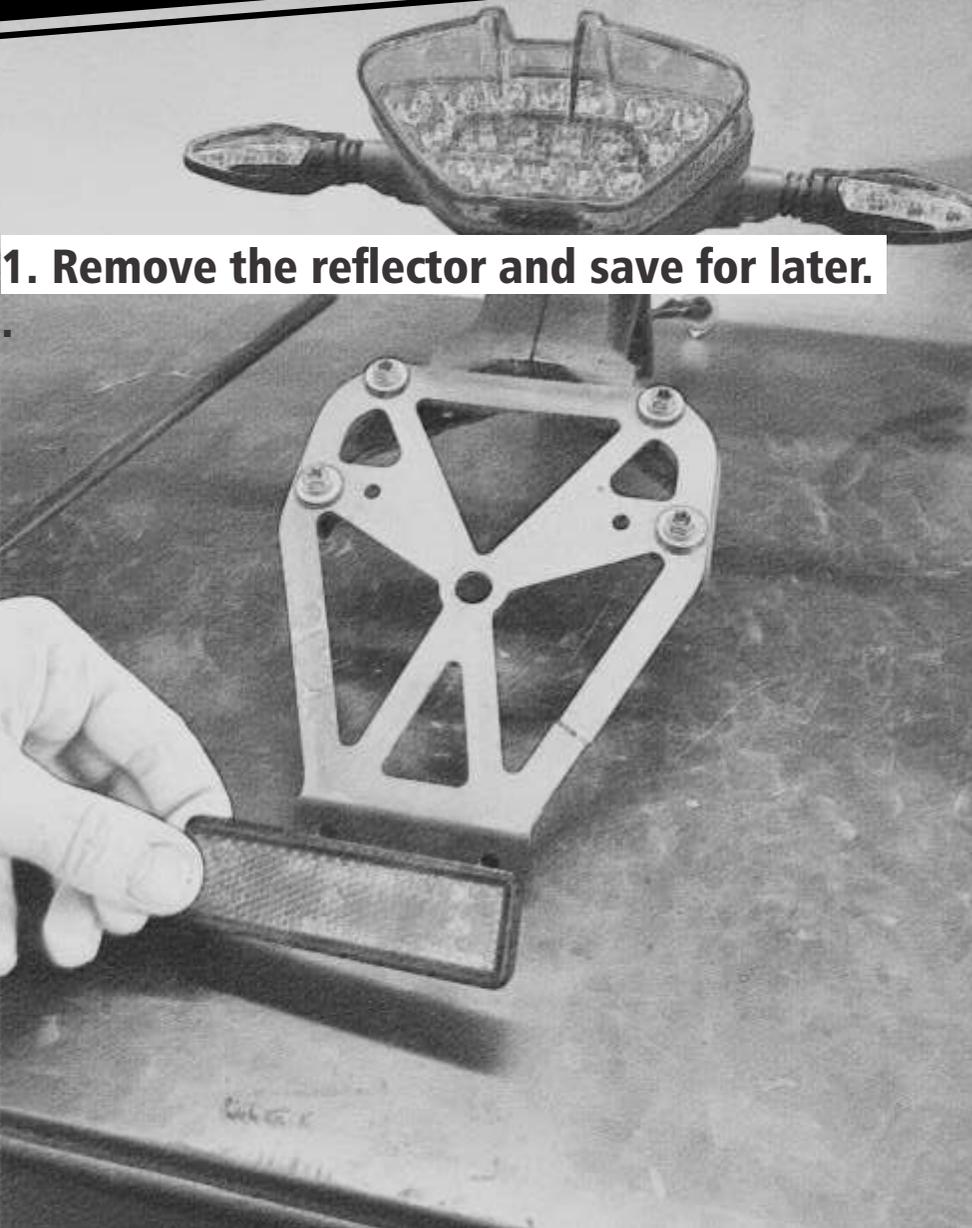


2. Remove 3 bolts from Tail Tidy.


Remove 4 bolts from plate to take it apart.

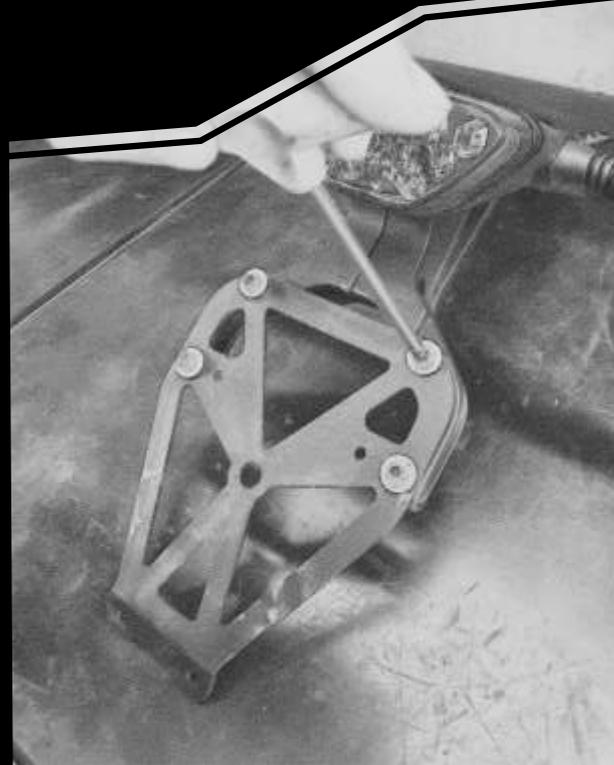


Installation Instructions 3.1

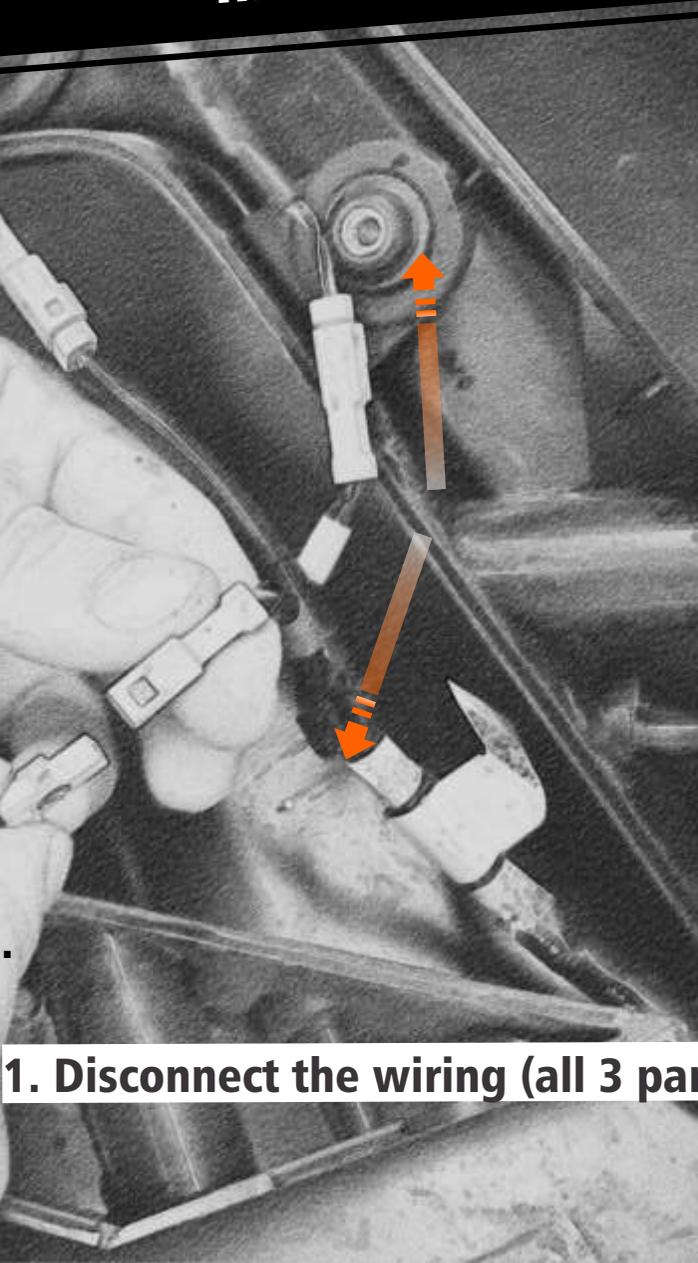

1. Disconnect the wiring (all 3 parts).

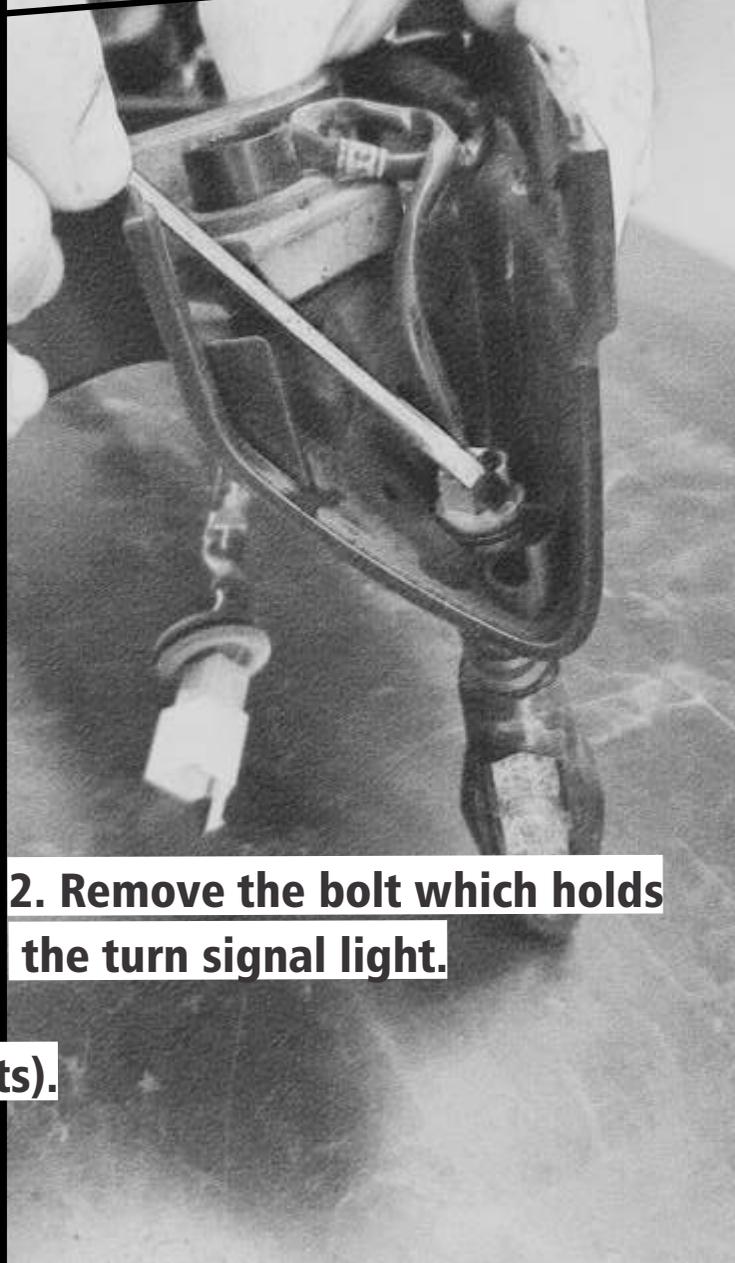


2. Remove the bolt which holds the turn signal light.

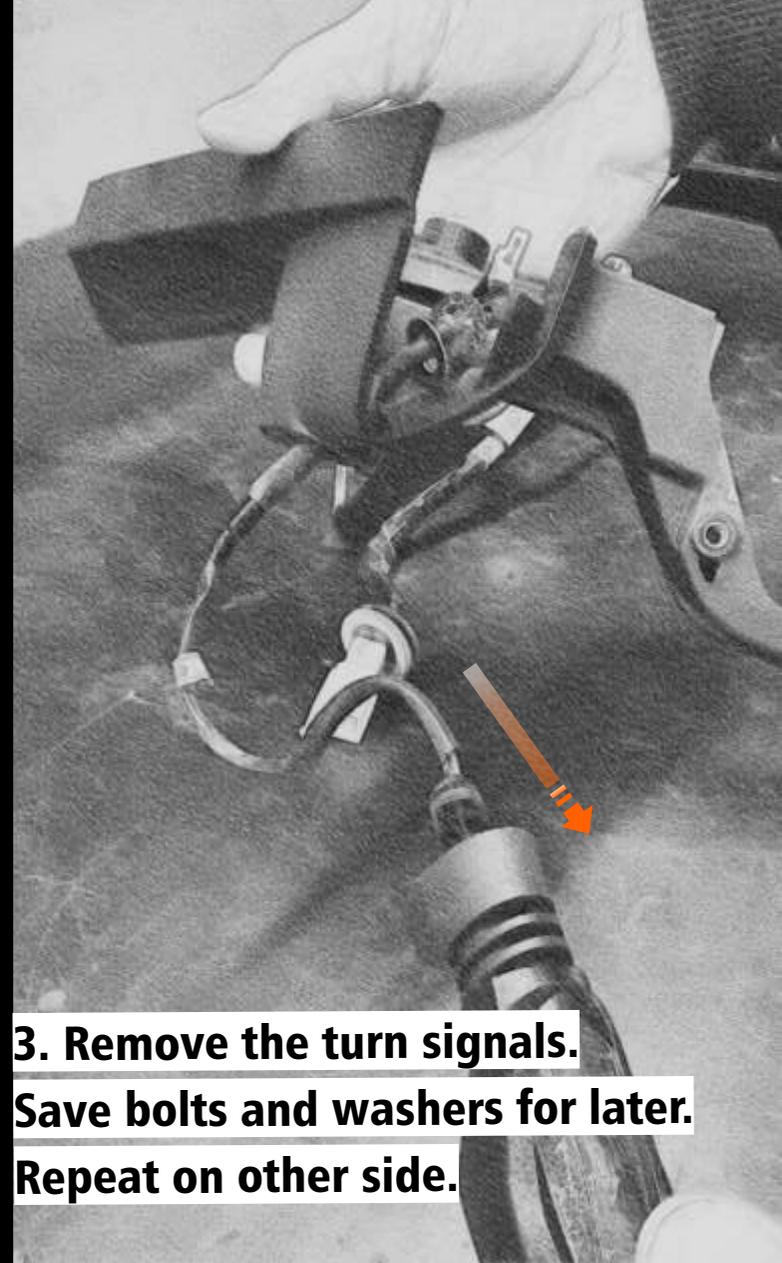

3. Remove the turn signals. Save bolts and washers for later. Repeat on other side.

Installation Instructions 4

1. Put part **E** on turn signal light
Only right side: add part (heat protector) on wiring.

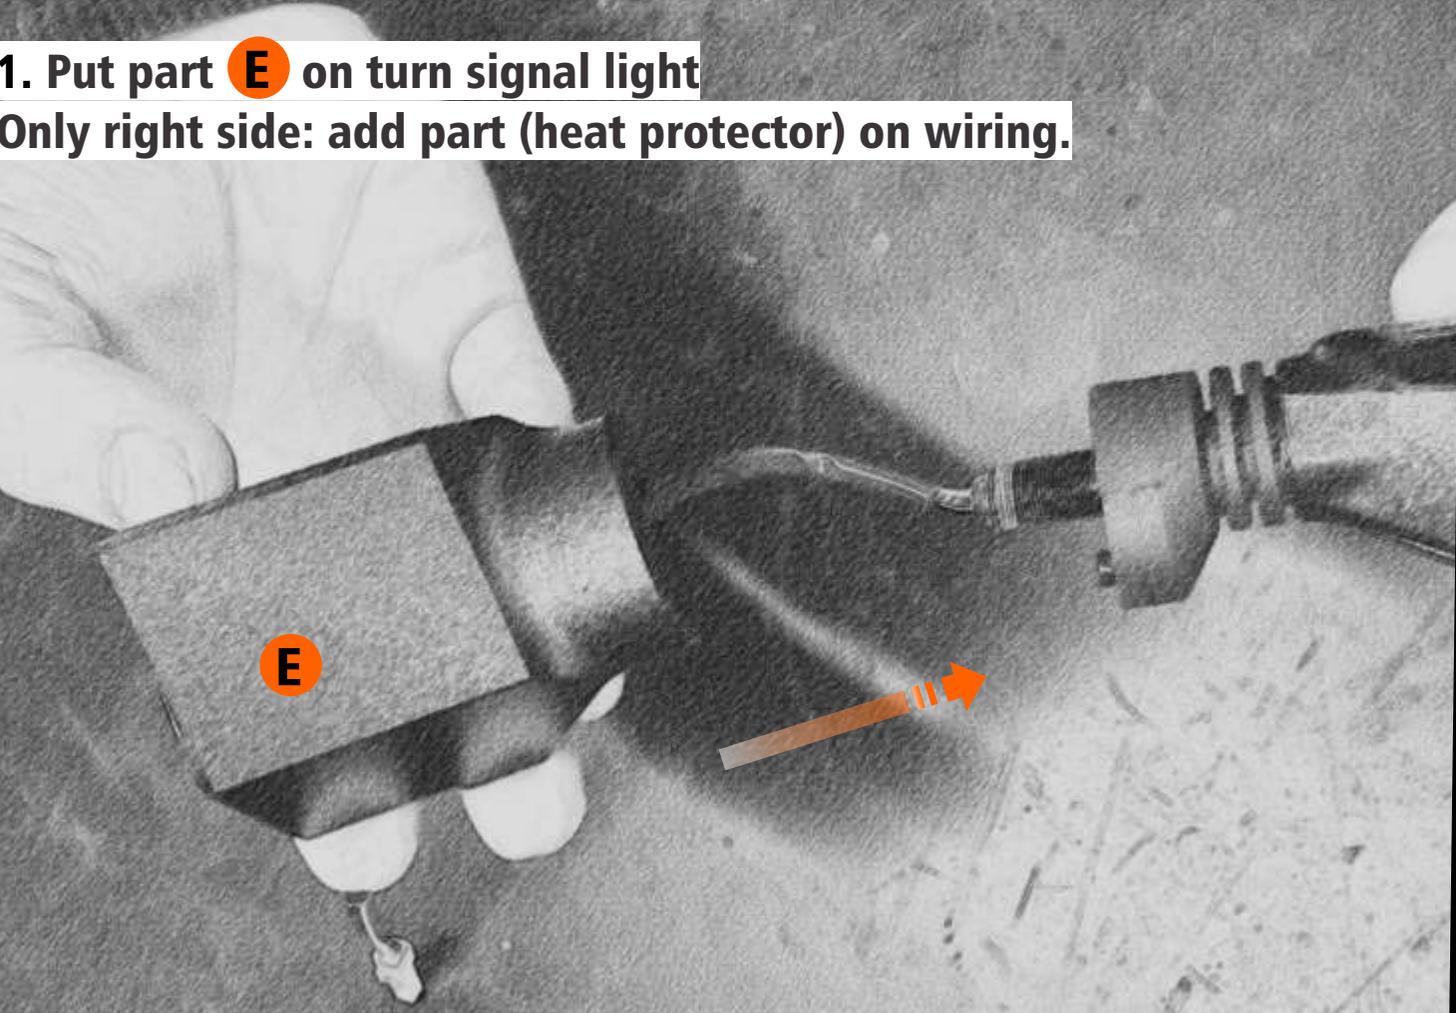

Add stock bolts and washers back with help of tool (fully tighten)



Repeat on other side.


Installation Instructions 4.1



1. Put part **H** on turn light signals.




2. Add bolt and washer onto wiring and tighten a bit.

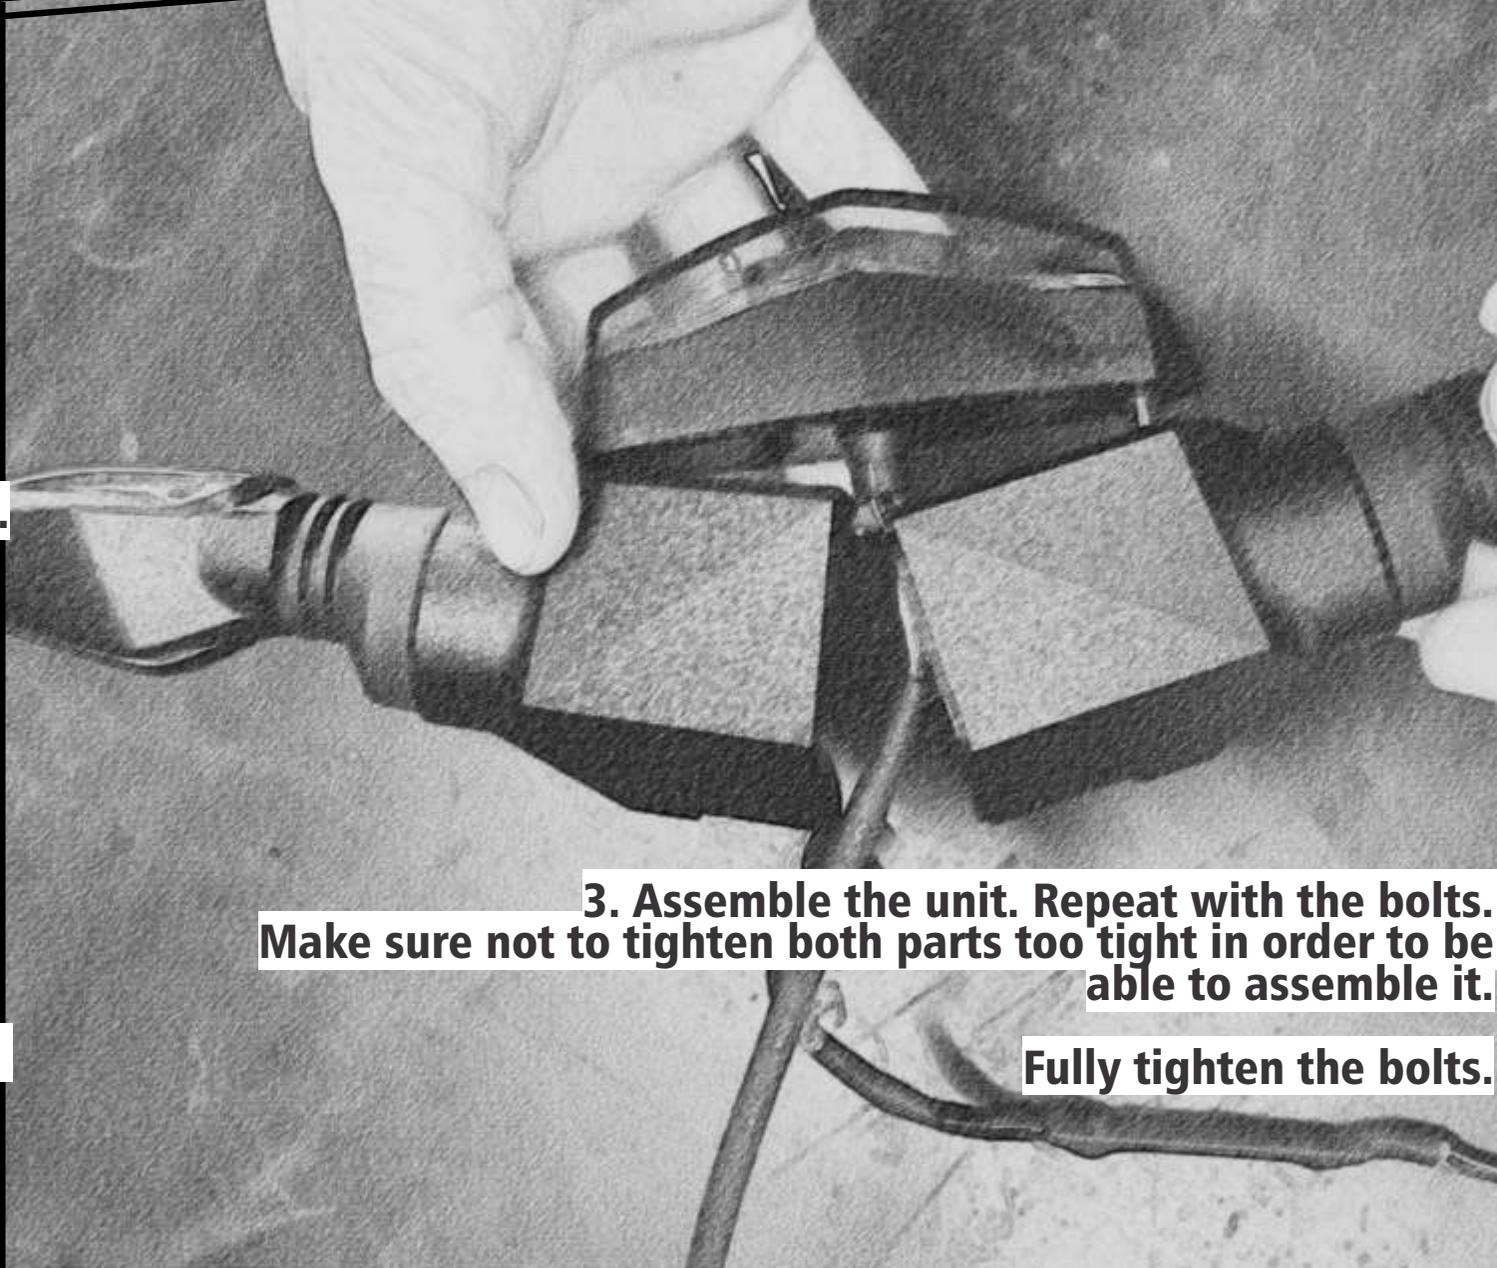

3. Assemble the unit. Repeat with the bolts. Make sure not to tighten both parts too tight in order to be able to assemble it.

Fully tighten the bolts.


Installation Instructions 4.2

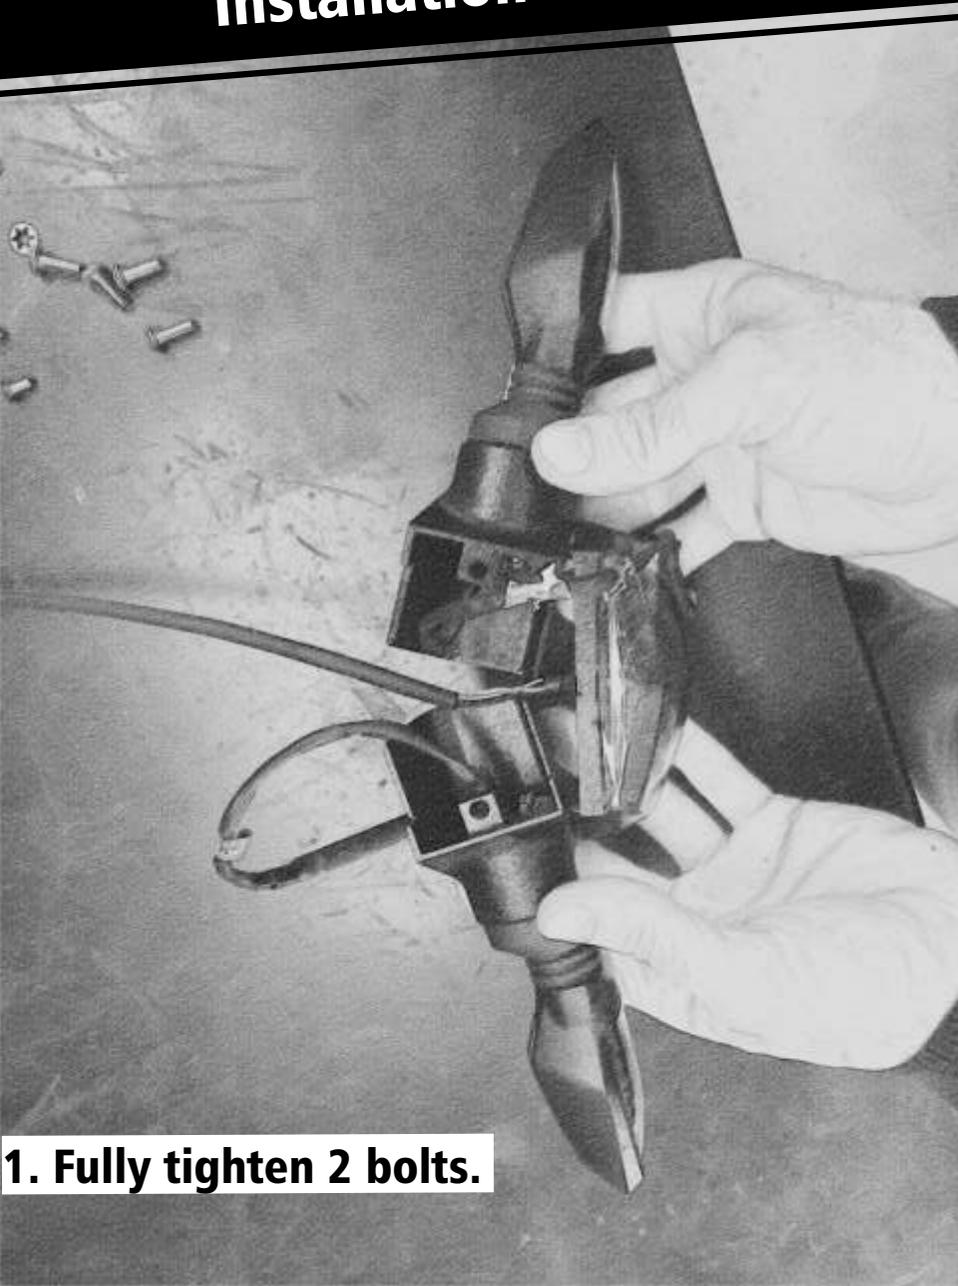


1. Fully tighten 2 bolts.




Installation Instructions 4.3

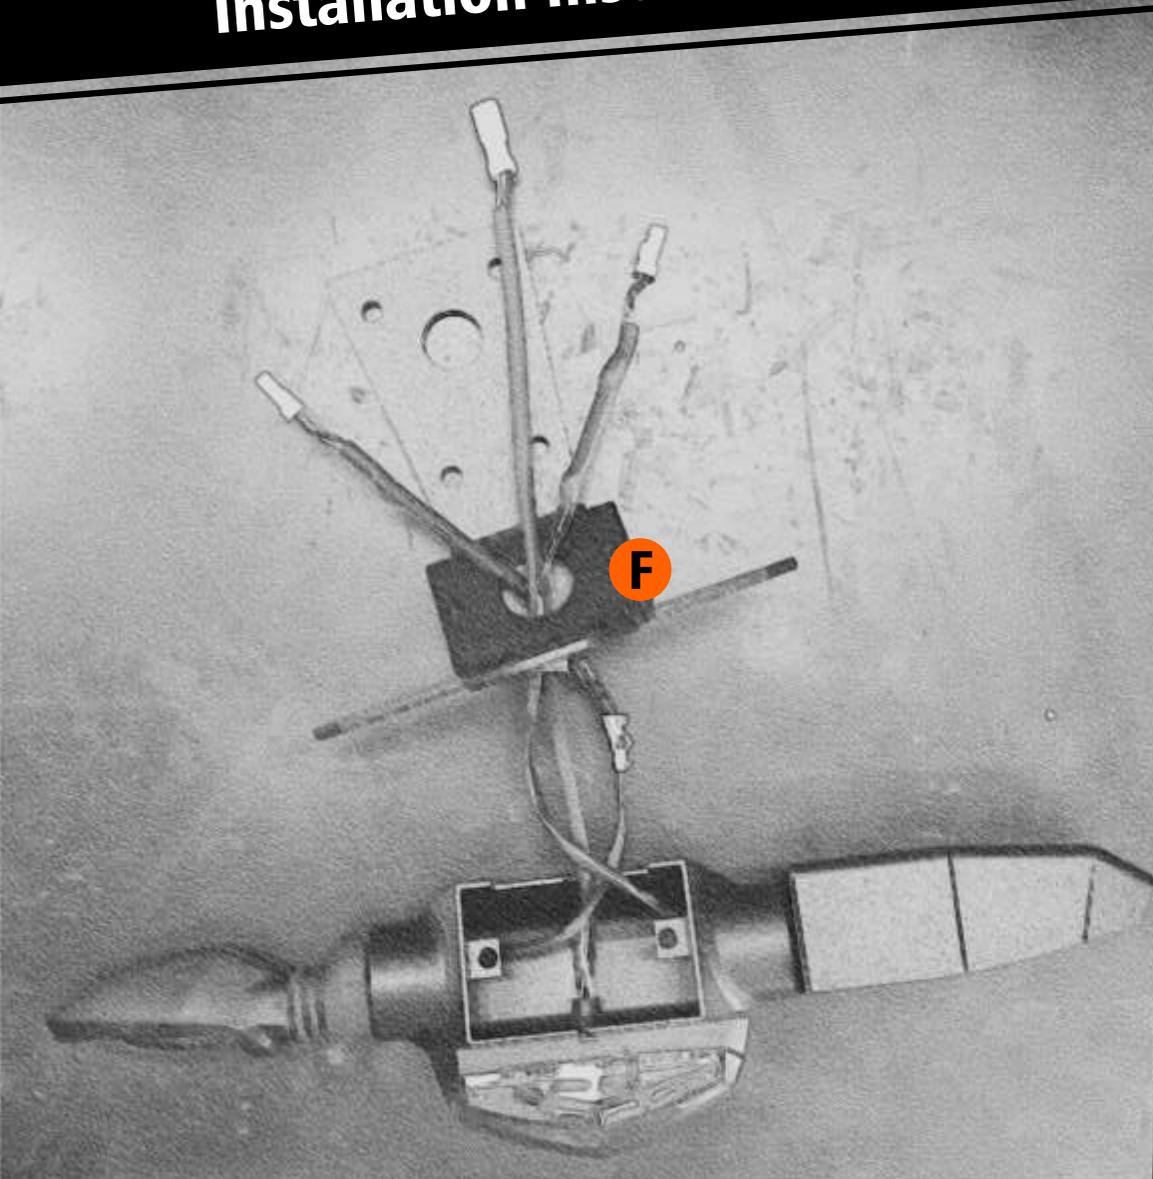


Put part **F** on wiring and tighten bolts.

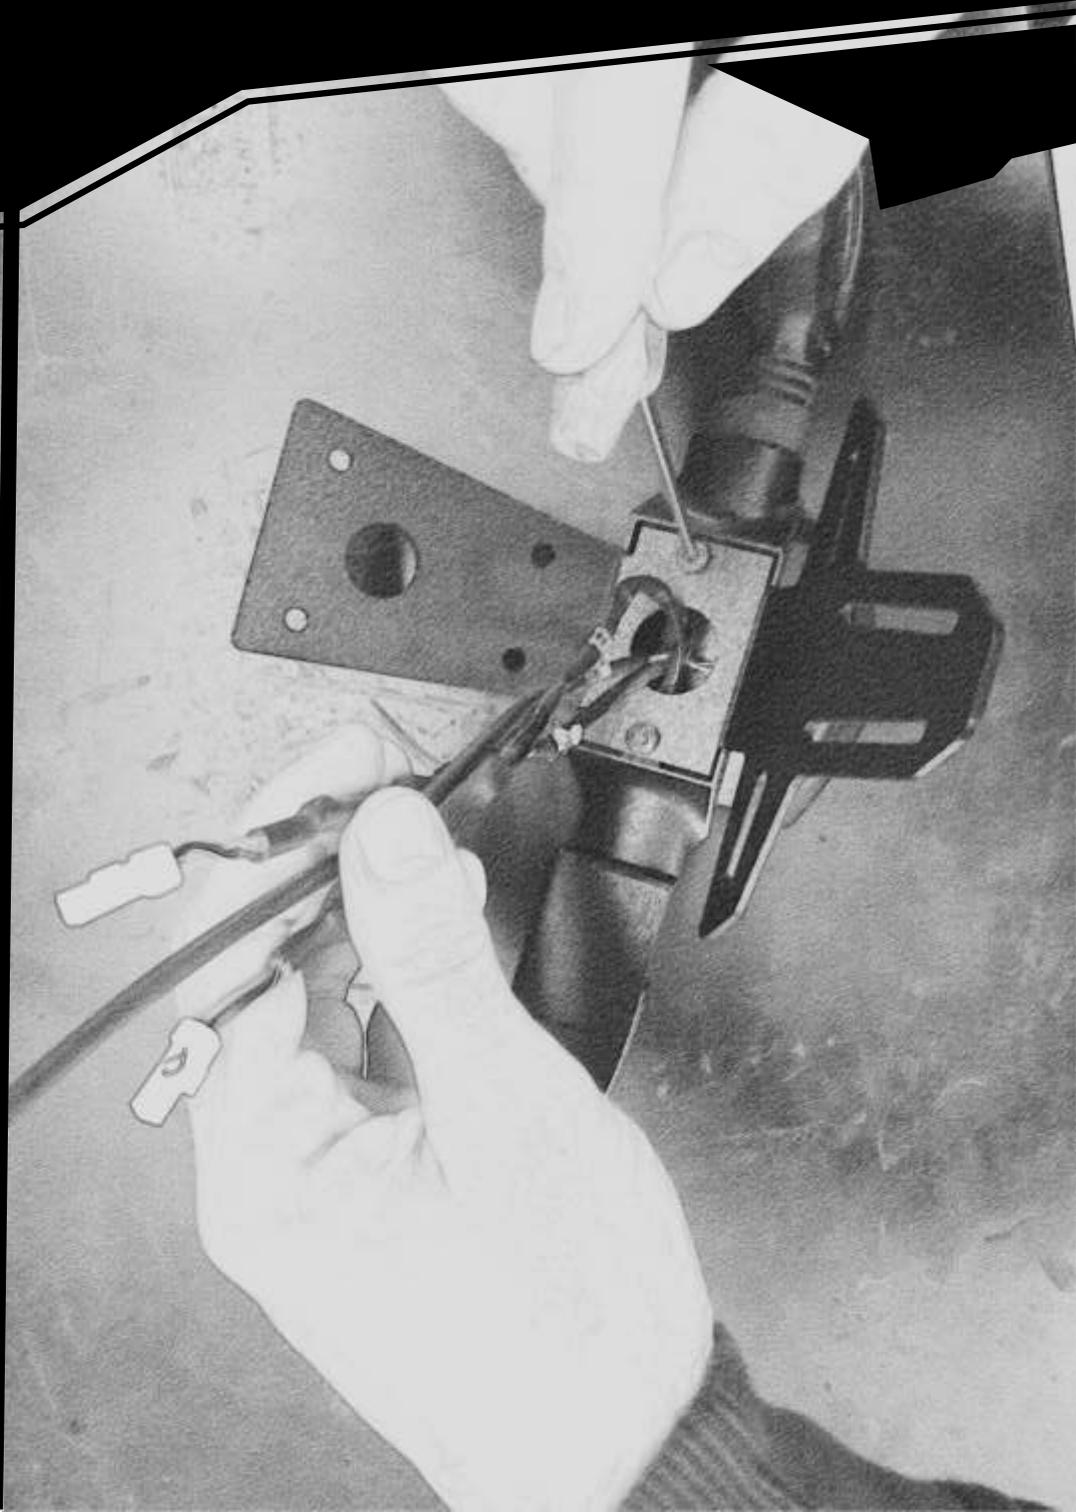

Installation Instructions 5

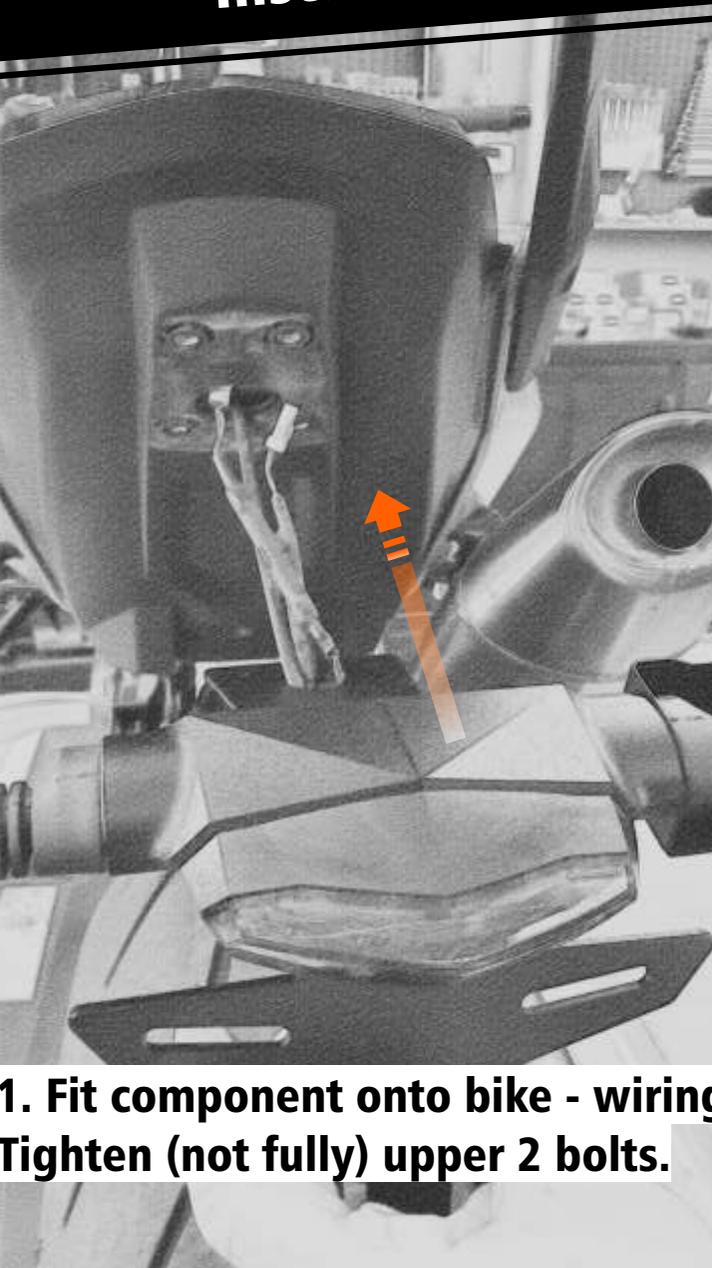

1. Fit component onto bike - wiring first.
Tighten (not fully) upper 2 bolts.

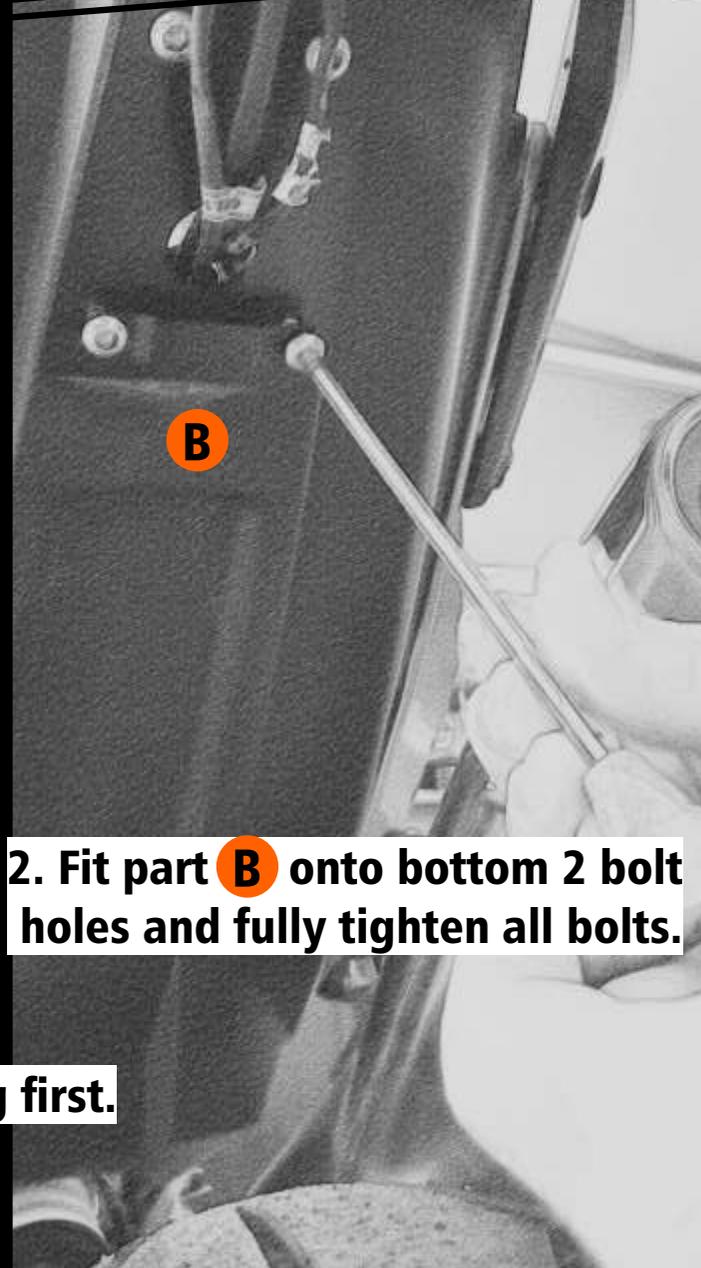


2. Fit part **B** onto bottom 2 bolt holes and fully tighten all bolts.




3. Slide up plate cover **G**


Installation Instructions 6

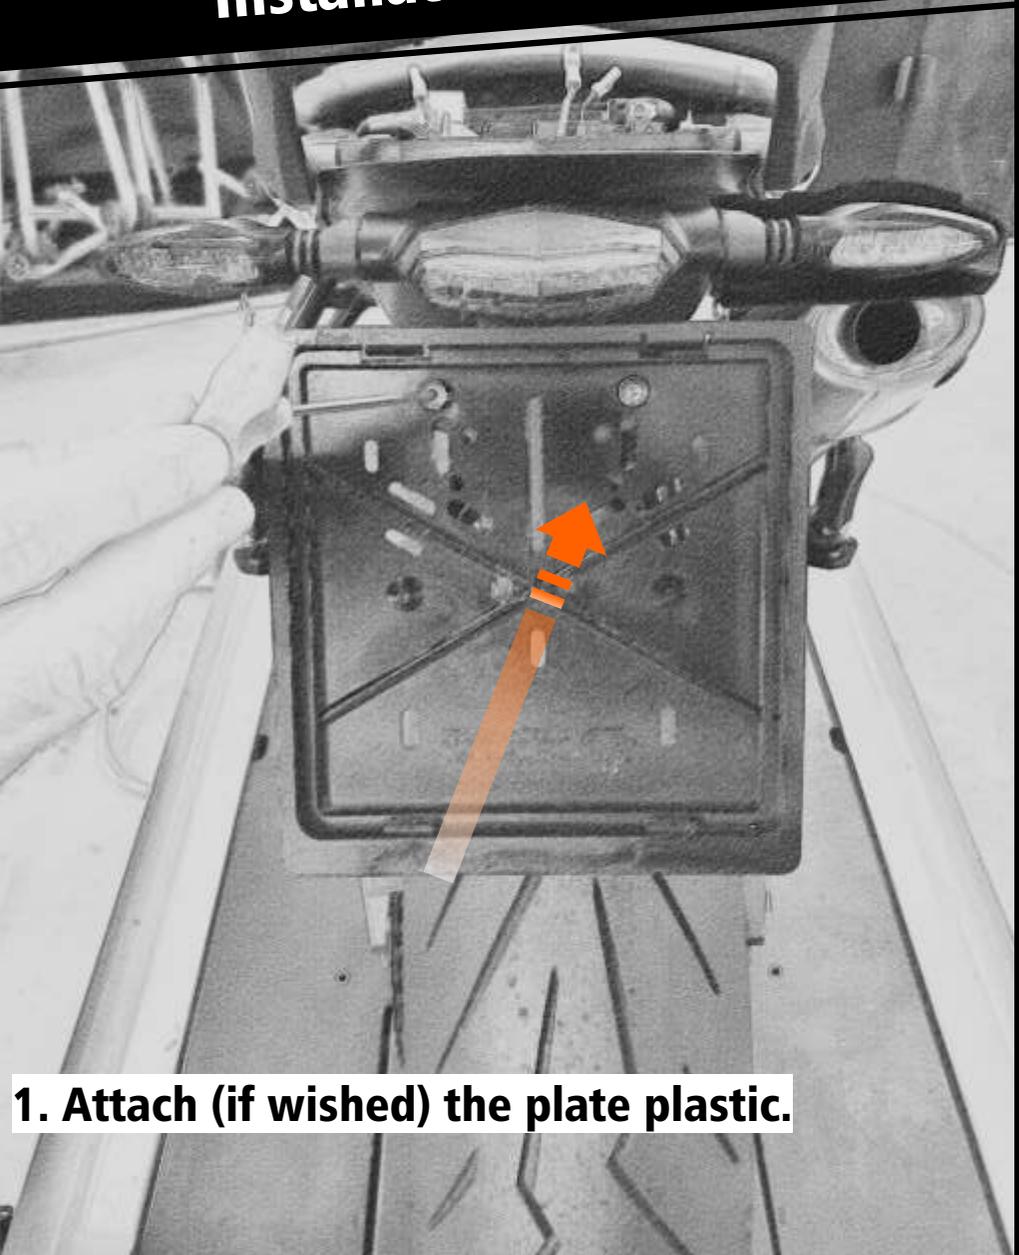


1. Attach (if wished) the plate plastic.

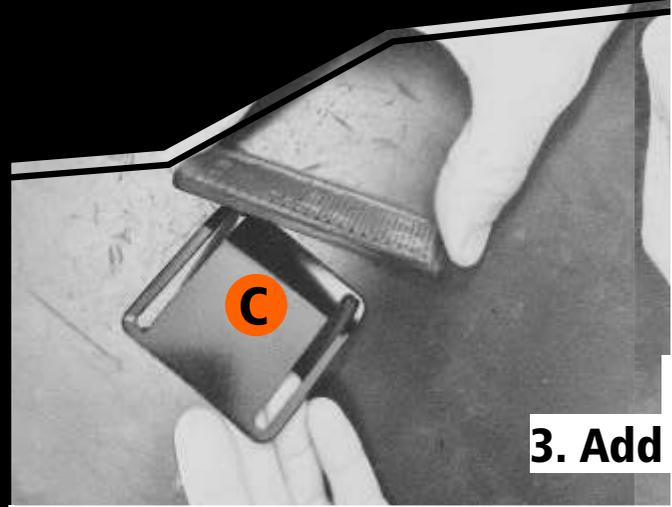

2. Fit reflector to part C
3. Add bolts and rubber washers.

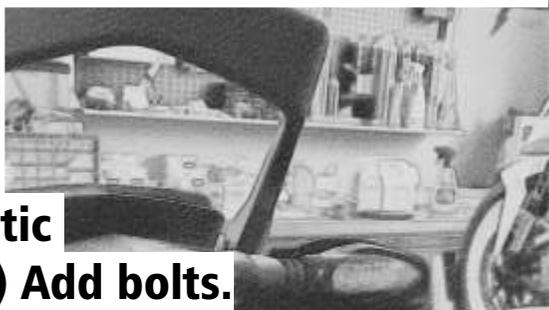


4. Fit reflector to bottom of plastic (use a power tool to drill a hole) Add bolts.

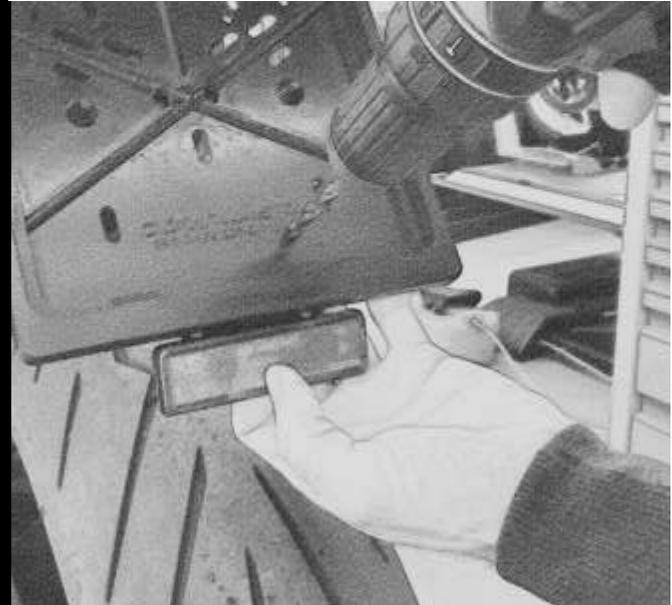

5. Fully tighten.

Installation Instructions 6.1

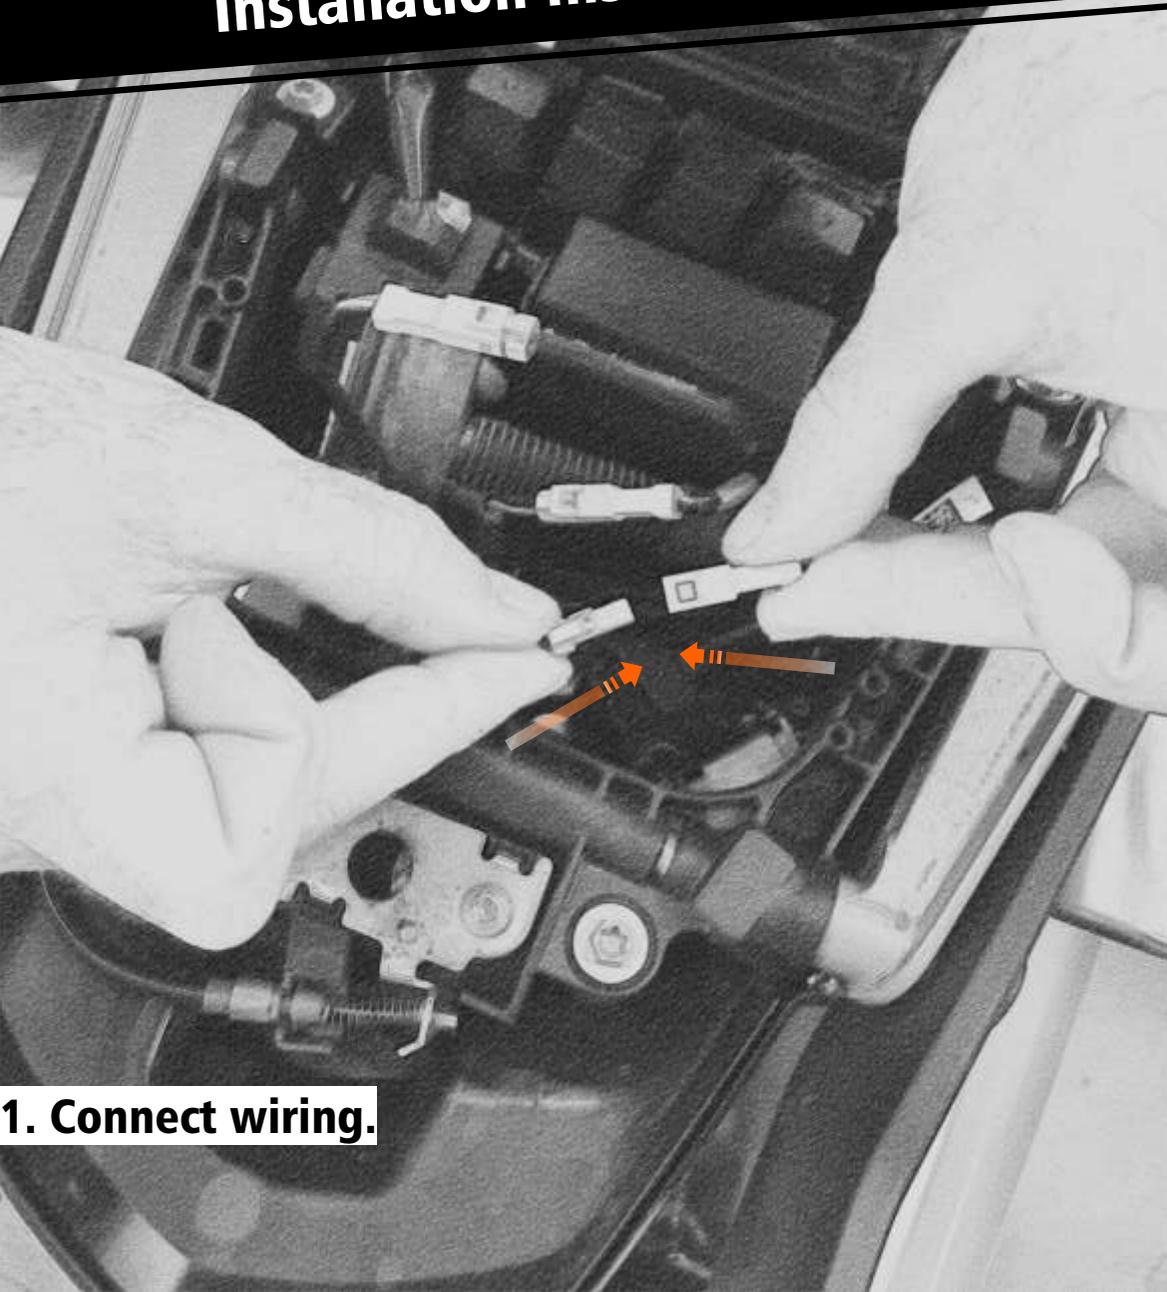

1. Connect wiring.



2. Put back seat.

 **IMPORTANT** 

After installation of your tail tidy ensure that the license plate does not contact the rear tyre when suspension is fully compressed.

It is recommended that periodic inspections are made to ensure that all bolts are tightend.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced.

The manufacturer or supplier cannot be held responsible for products that are incorrectly mounted or inappropriately used.

It is recommended to check all connections regularly for tightness of fit.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

**NOW YOU ARE READY...
TO ROCK THE STREETS!**



BAGOROSPERFORMANCE.COM